

Utilizing Doppler Corrected Position in Helmsmen Display

Was wondering how I can utilize the a Doppler corrected position in NaviPac. I am using an RDI Workhorse doppler and have it attached to the main survey ROV. But I am wondering how I can display the doppler corrected position in Helmsmen Display rather than the USBL raw positions. On object shows up with the doppler corrected positions (UHD 61 DL Fit-311) but I am unsure how to actually use this position or output to external sources.

Reply #1

For all output's and displays you must go in and select the object - and thus define if it's using the raw USBL or the DVL filtered object.

Please note that for NaviScan you should use the raw - or perhaps event better send both the raw and the DVL filtered

Eiva KB

<http://kb.eiva.dk/Knowledgebase/Article/10343>